




TECH TIPS

ADDING BUTTONS ON THE CANVIEW 4 SWITCH PANEL

NO. 124

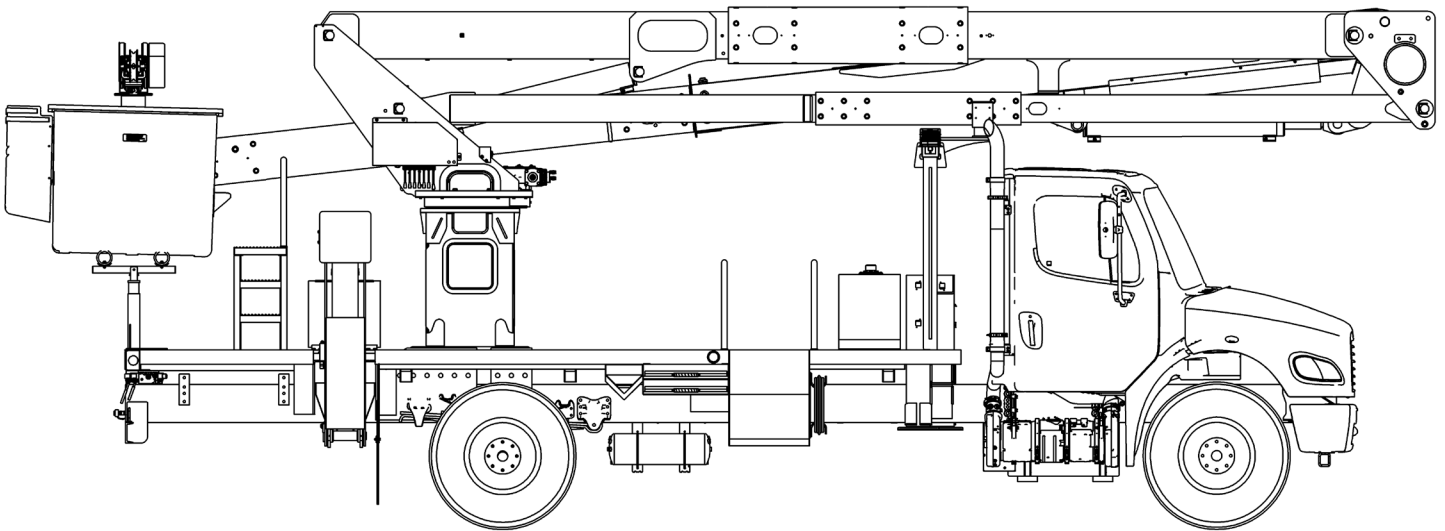

SERVICE CALL:
ADDING BUTTONS ON THE
CANVIEW 4 SWITCH PANEL



MODEL(S):
ALL TEREX UTILITIES EQUIPMENT
USING THE CANVIEW 4 SWITCH
PANEL



TOOLS NEEDED:
ELECTRICAL SCHEMATIC

TEREX UTILITIES TECHNICAL SUPPORT TEAM

PHONE: 1-844-TEREX4U (1-844-837-3948) | EMAIL: UTILITIES.SERVICE@TEREX.COM



DANGER

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury.

Many of the hazards identified in the Operator's Manual are also safety hazards when maintenance and repair procedures are performed.

DO NOT PERFORM MAINTENANCE UNLESS:

- ✓ You are trained and qualified to perform maintenance on this machine.
- ✓ You read, understand and obey:
 - manufacturer's instructions and safety rules
 - employer's safety rules and worksite regulations
 - applicable governmental regulations
- ✓ You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this Tech Tip is a supplement to the Service Manual. Consult the appropriate Service Manual of your machine for safety rules and hazards.



TECH TIP 124 | RELEASED 12.08.2023 | VERSION 1.0
©TEREX UTILITIES. ALL RIGHTS RESERVED

CONTENTS

TECH TIP #124

TOC

4

| *View settings*

| *Change the number of buttons*

STEP 1 - STEP 3

5

| *Set unused buttons to spare*


STEP 4

STEP 1

Press the middle button on the display until Settings are displayed. If Settings is not available, this version of the Switch Panel does not support programming by the user.




Click on Settings to continue.

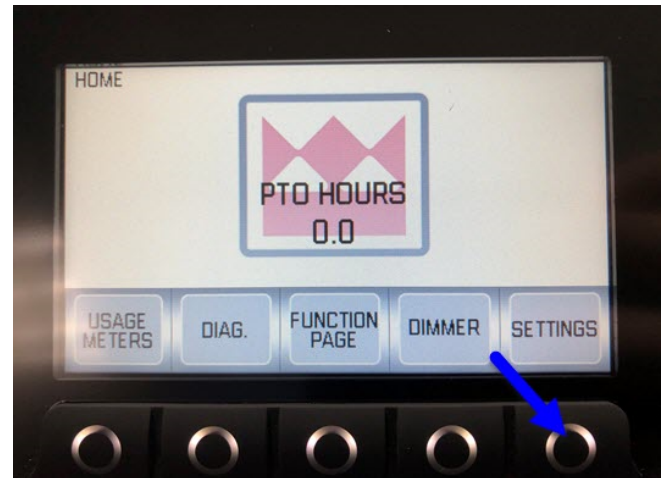


STEP 2

Use the up/down arrows to highlight Control Settings, then press the Select button.

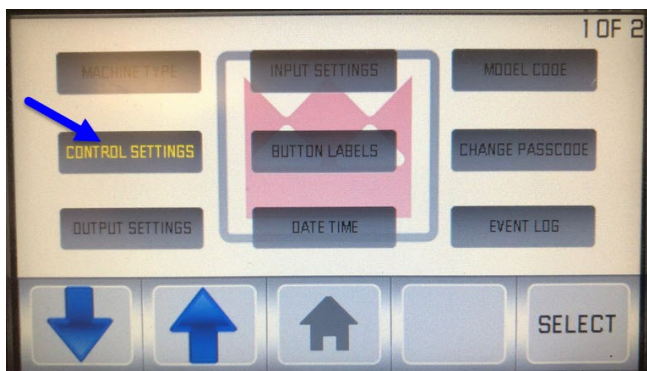

STEP 3


Use the up/down arrows to highlight the Number of Buttons. Press the Select button and change the number of buttons used. The number of buttons can be increased or decreased in increments of four.

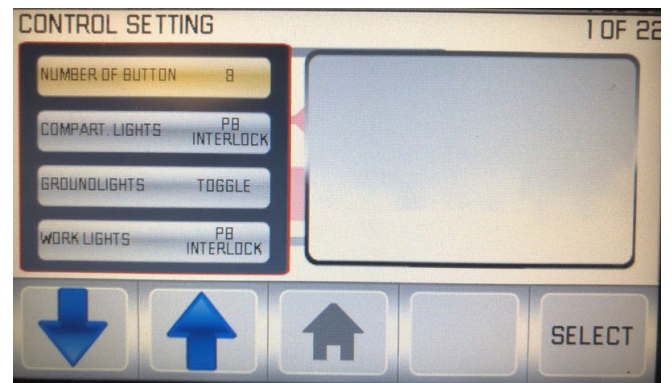

STEP 4

Any buttons that are not used must be set to spare. From the Setting screen use the up/down arrows until Button Labels is highlighted. Press the Select button.

Use the up/down arrow to highlight buttons that are not used, then press the Select button. Use the up/down arrows until spare is selected as the option, then press Select again. This will be done for all unused buttons.

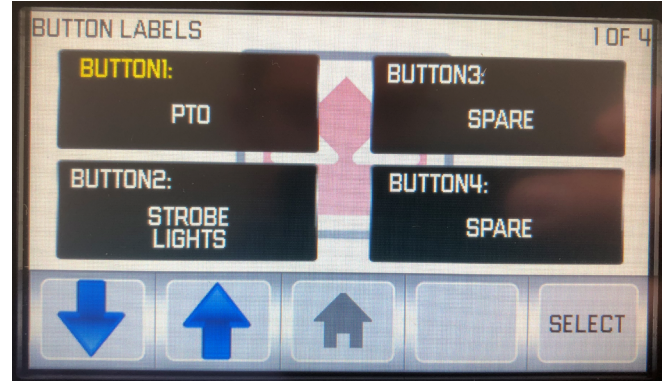

Note: Reference Tech-tip 123 for additions instructions to program the button.

Note: Not all Canview 4 switch panels have this ability. If you have any questions, contact Terex Utilities Technical Support at 1-844-Terex4U (1-844-837-3948) or utilities.service@terex.com

Note: Any changes made after factory installation should be noted in the electrical schematic provided with the unit. Contact Terex Utilities Technical Support at 1-844-Terex4U (1-844-837-3948) or utilities.service@terex.com to notify us about the change. Keeping our files up-to-date will enable the correct program to be loaded if a replacement switch panel is ordered in the future.



FOR FURTHER ASSISTANCE,
CONTACT THE TEREX UTILITIES TECHNICAL SUPPORT TEAM
PHONE: **1-844-TEREX4U (1-844-837-3948)** | EMAIL: **UTILITIES.SERVICE@TEREX.COM**
